


NOTE:

1. DESIGN IN ACCORDANCE WITH LOCAL BUILDING CODE REQUIREMENTS FOR ROOF LOADS AND ANCHORAGE. ALL FRAMING MUST HAVE 2" NOMINAL OR GREATER WIDTH FOR PLYWOOD DECK NAILING.

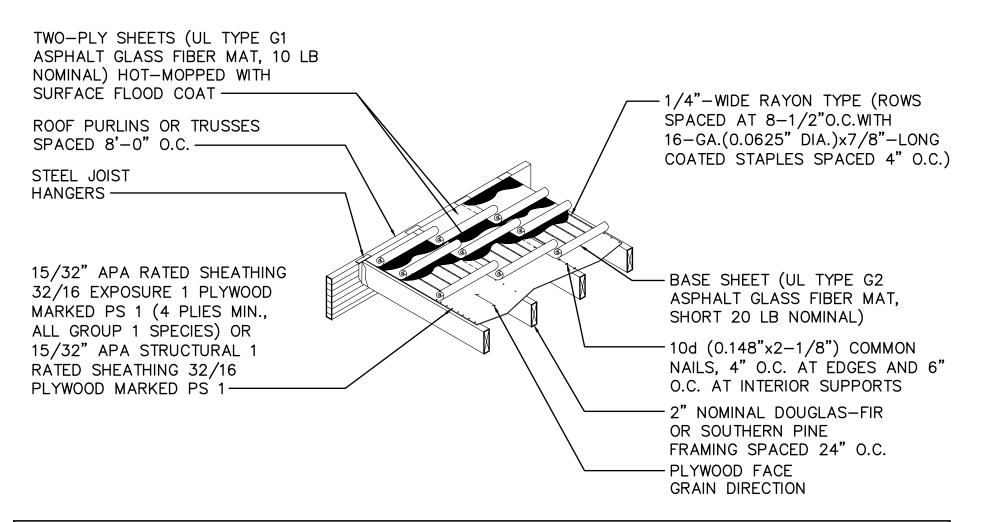

NOTE:

- 1. TRUSSES OR I-JOISTS USED FOR PURLINS MUST HAVE CHORDS OR FLANGES OF 1-3/4" MIN. DEPTH FOR PLYWOOD DECK NAILING.
- 2. FOR SEMI-WIND-RESISTIVE ASSEMBLIES (CLASS 60), PLYWOOD DECK NAILING SPACED 6" O.C. AT ALL SUPPORTS AND ROOFING BASE SHEET ATTACHED WITH RAYON TAPE ROWS SPACED 11-1/3" O.C.
- 3. INSTALL ROOFING BASE AND PLY SHEETS WITH ROLL DIRECTION PARALLEL TO PLYWOOD FACE GRAIN DIRECTION, AS WITH A PANELIZED ROOF SYSTEM.